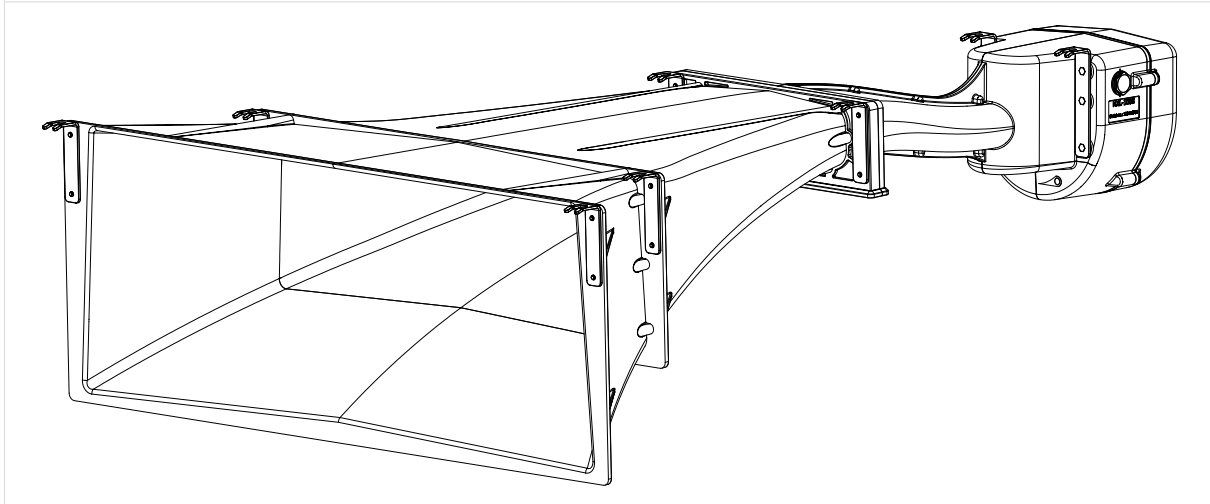


MANUAL

Product	NXL-100S	Part numbers	0200201, 0200203 and 0200205
Document version	1.0	Document status	Release
Notes	Full Height product variant 0200201 = Standard with cable gland on left side (front view) 0200203 = Optional Hirschmann CA 3 GD* on left side (front view) 0200205 = Optional Hirschmann CA 3 GD on right side (front view)		

UNPACKING INSTRUCTIONS

This document describes the unpacking instructions for the NXL-100S advanced tunnel horn loudspeaker. The shipping box of the NXL-100S contains modular elements that require field assembly.

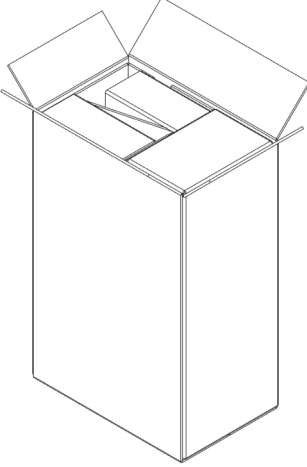
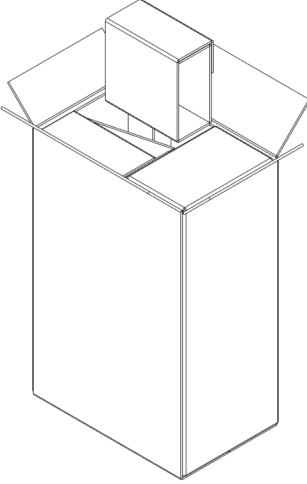
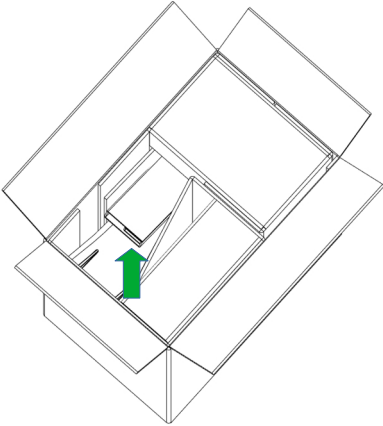


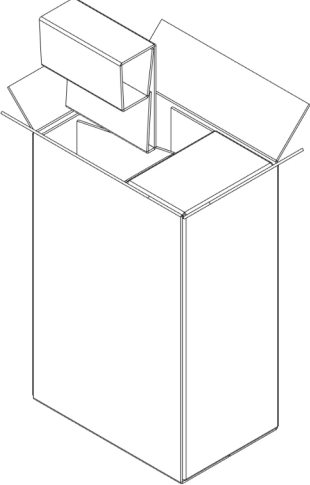
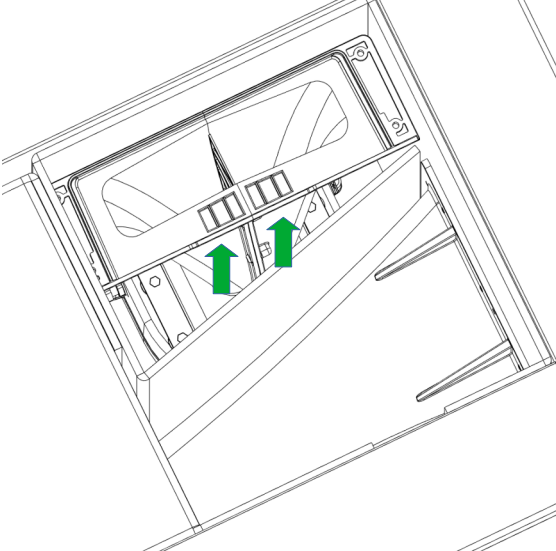
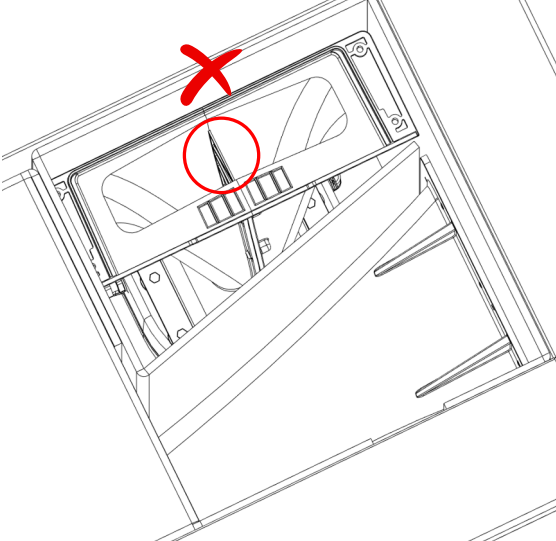
CONTENTS

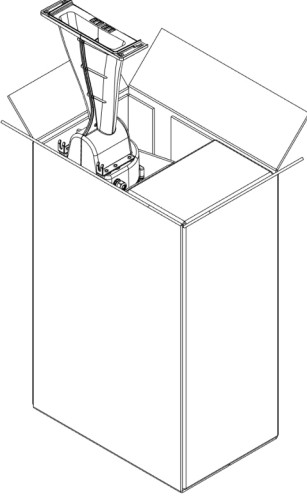
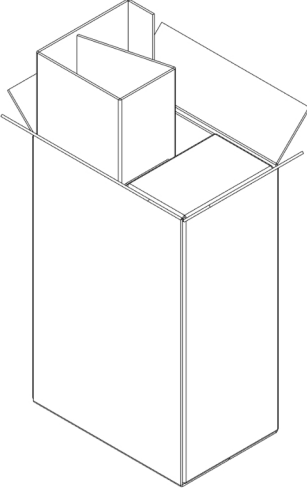
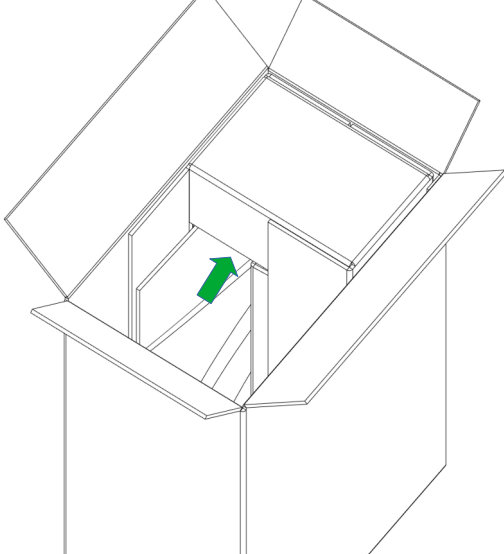
Unpacking Shipping Box.....	2
Unpacking Filter Parts.....	6
Unpacking Inner Box.....	7
Document Revision.....	9

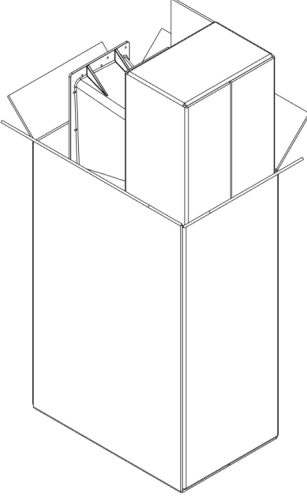
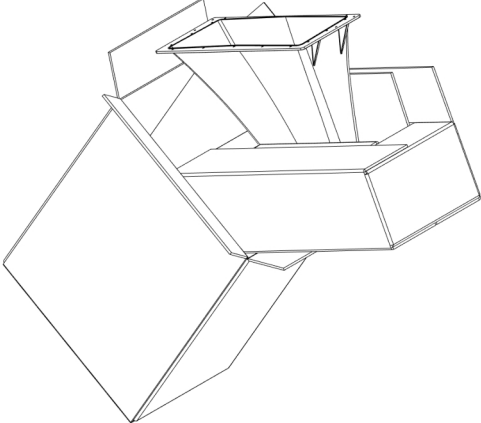
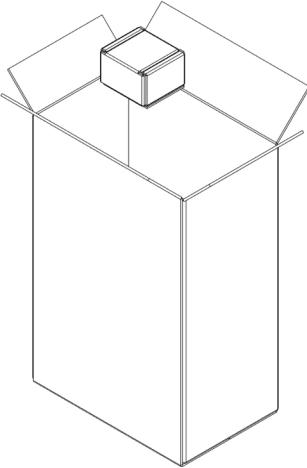
* Product names such as Hirschmann CA 3 GD mentioned in this document are the property of their respective owners. The use of these names is solely for identification and reference purposes. NXD-Audio BV does not claim any ownership of the trademarked names mentioned.

UNPACKING SHIPPING BOX

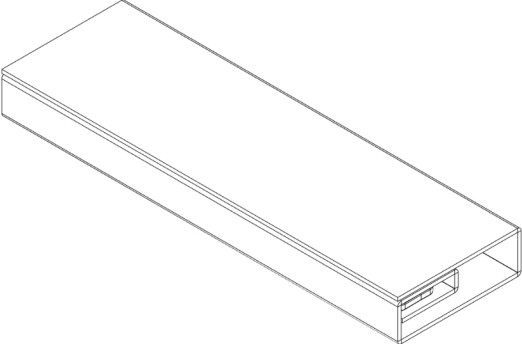
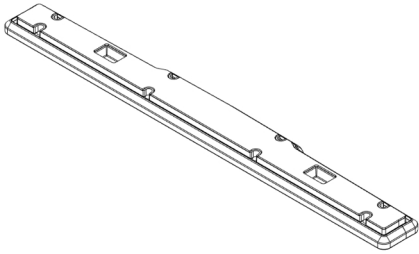
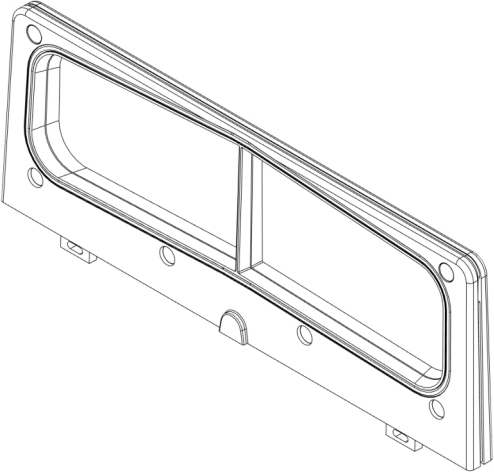
1.	Open the box.	
2.	Remove the top buffer part of the horn mid section.	
3.	Remove the carton that contains the ingress protection filter parts.	

4.	Remove the top buffer part of the horn rear section.	
5 ^a .	Remove the horn rear section. Start by pulling on the rear side of the flange at the indicated locations.	
5 ^b .	Do not pull at the coupling plate.	

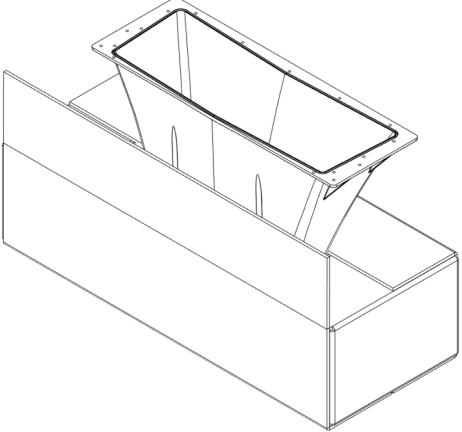
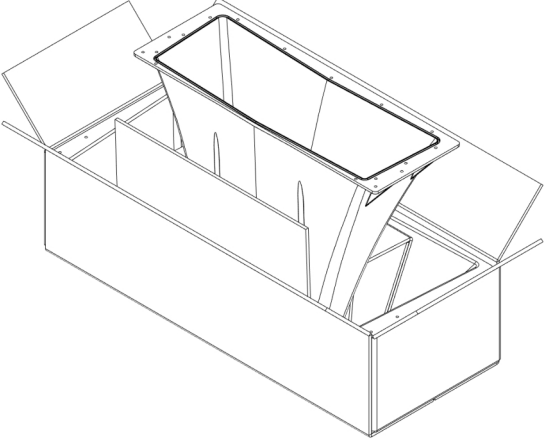
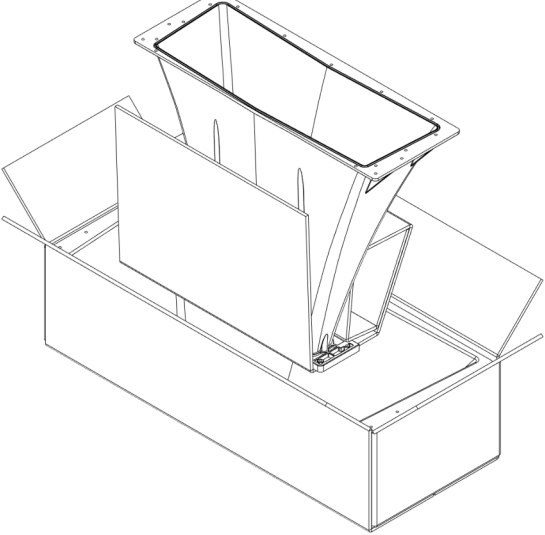
5 ^c .	Pull the horn rear section out of its compartment.	
6.	Remove the carton that forms the compartment for the rear section of the horn.	
7 ^a .	Position one hand at the indicated location in order to pull the inner box out of the main shipping box.	

7 ^b .	Pull the inner box that contains the front and mid section out of the main box.	
7 ^c .	During this operation it is most convenient to tilt the main box when the inner box has been pulled out approximately 0.5 m. This ensures that the mid section will not fall out of the inner box.	
8.	Remove the remaining small inner box that contains the brackets and fasteners.	

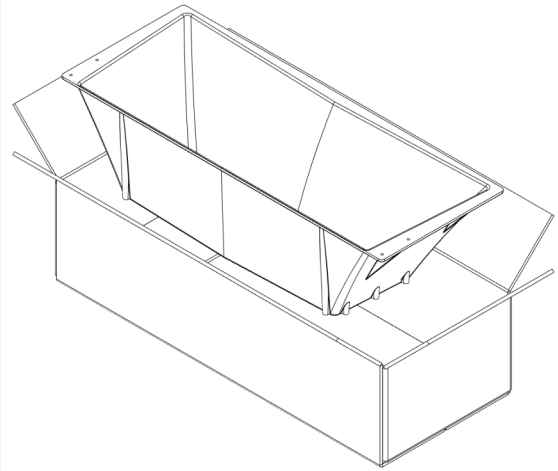
UNPACKING FILTER PARTS

1.	Open the packaging.	
2.	Remove the filter cover from the packaging.	
3.	Remove the filter assembly from the packaging. This assembly consists of a front and rear frame with a filter mesh in between.	

UNPACKING INNER BOX

1.	The inner box contains the front and mid section of the horn.	
2.	Open the box.	
3.	Remove the mid section with the buffer carton from the box.	

4. Remove the front section from the box.



DOCUMENT REVISION

0.1	12-01-2024	Start version.
1.0	03-09-2024	Added additional part numbers and small changes.



NXD-Audio B.V.
Koxkampseweg 10
5301 KK Zaltbommel
The Netherlands

